



Power Wheels Porsche GT3 Tire Replacement

You will need:

Straight head screwdriver, pliers, 9/16 socket, 1/8" Allen wrench

Rear Tires:

1. Put the battery or a jack stand under the rear of the car to lift the wheels off the ground.
2. Remove the black center wheel caps by popping them off with a straight head screwdriver.
3. Crush one black cap nut with a pair of pliers until it falls off.
4. Remove hubcap and tire.
5. Slide the new tire on, making sure the 4 indents in the tire sit into the 4 bumps on the driver hub.
6. Slide hubcap on.
7. Slide a wheel collar onto the axle and tighten the set screw using a 1/8" Allen wrench. * Pro-tip - For best grip use a grinder or dremel tool to put a flat spot in the axle for the set screw to lock into
8. Repeat for the other side.
9. Snap a center hub onto each hubcap. Remove jackstand//battery.

Front Tires:

1. Put the battery or a jack stand under the rear of the car to lift the wheels off the ground.
2. Remove the black center wheel caps by popping them off with a straight head screwdriver.

3. Remove the wheel nuts with a 9/16" wrench. Remove the tires and bushing. Leave the washer on.
4. Slide the front wheel adapter onto the axle.
5. Slide the new tire on, making sure the 4 indents in the tire sit into the 4 bumps on the wheel adapter.
6. Slide the new hubcap on.
7. Put the lock nut on BACKWARDS. Tighten it til it bottoms out, then back it off until the wheel turns freely.
8. Repeat for the other side.
9. Snap a center hub onto each hubcap!
10. Stand back and admire how cool your Porsche GT3 looks now!